
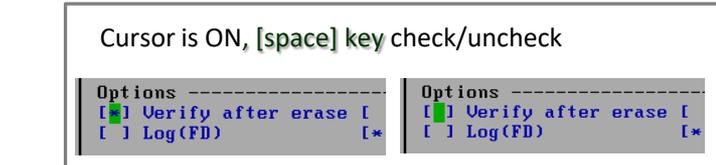
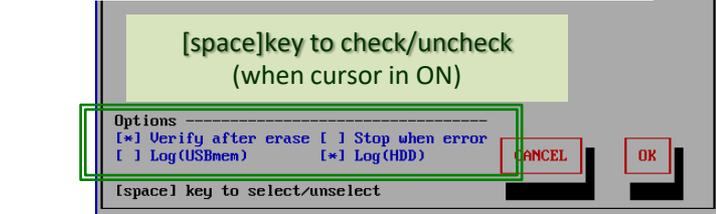
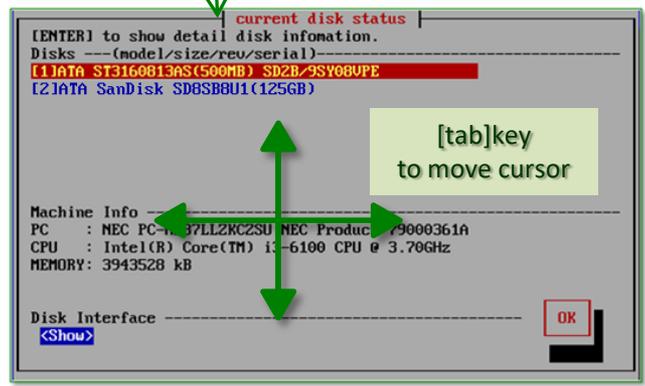


Basic operation of "Bootup erase program"

[GreenPepper PRO] Tutorials

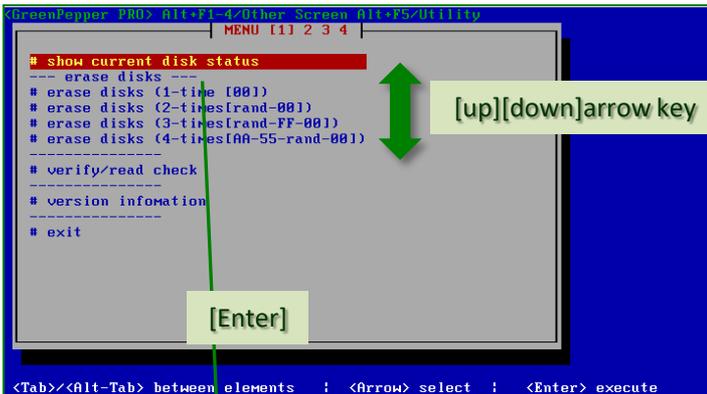

Cursor is ON, [up][down]key to select items.

Cursor is OFF

Cursor is ON, [enter] to push button

Cursor is ON, [enter] to push button

There are 4 screens displaying the erase menu, and each screen allows you to wipe a different disk drive simultaneously. You can switch screens even while the process is in progress. The screen that appears when you press Alt+F5 is the utility menu.

[Alt]+[F1], [Alt]+[F2], [Alt]+[F3], [Alt]+[F4], [Alt]+[F5] Switch to another screen

